

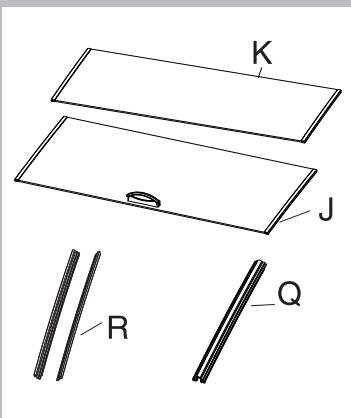
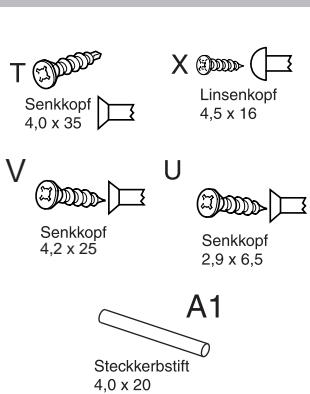
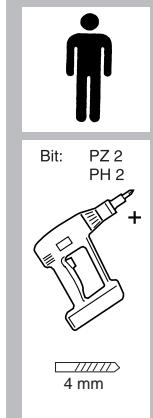
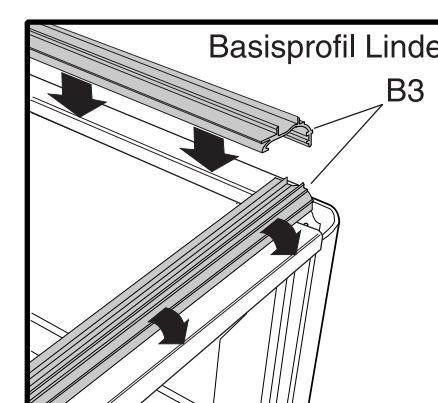
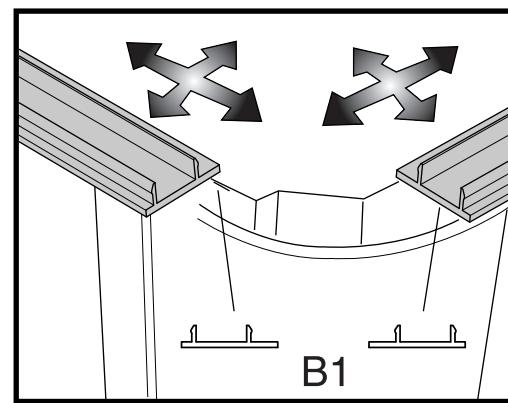
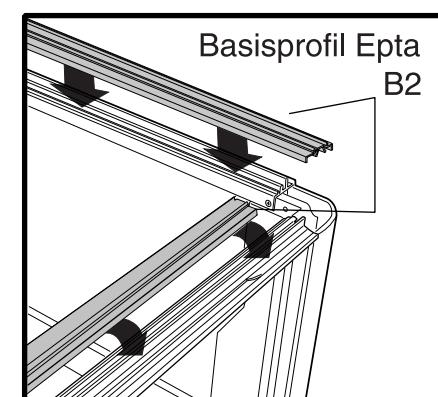
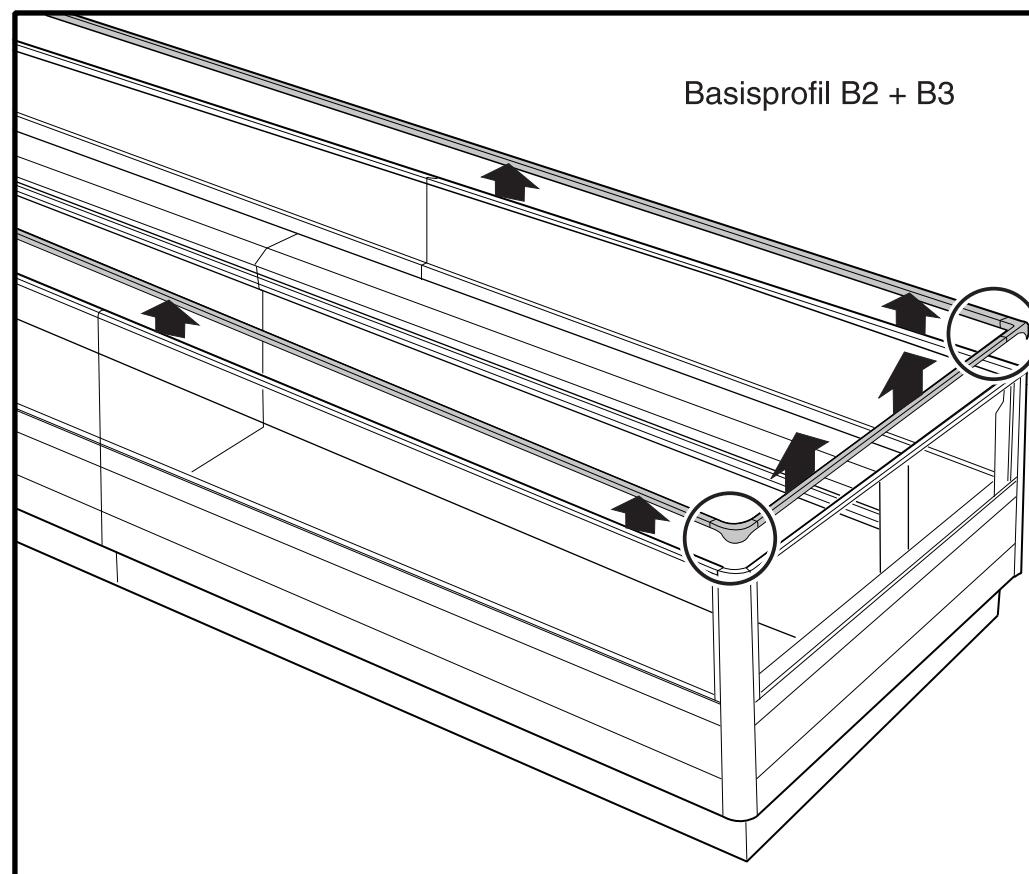
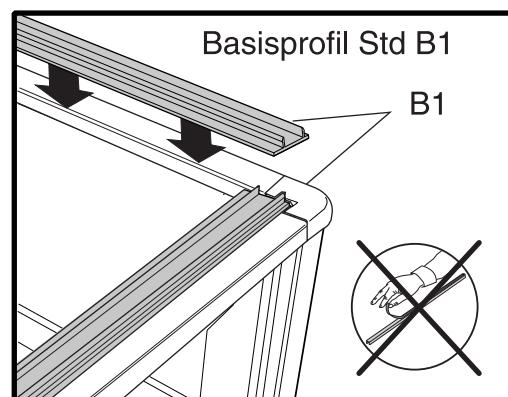


Montageanleitung REMIglas ecoline push für Längsmöbel


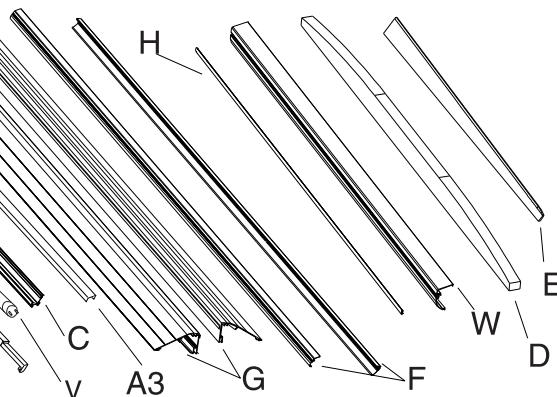


Basisprofil Std
Basisprofil Epta
Basisprofil Linde E5

B1
B2
B3



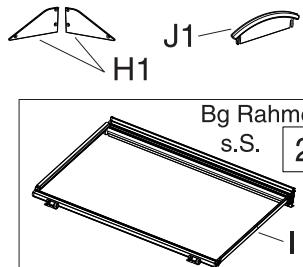


1
2
3
4
5
6
7
8
9
T.Nr.: 10032088

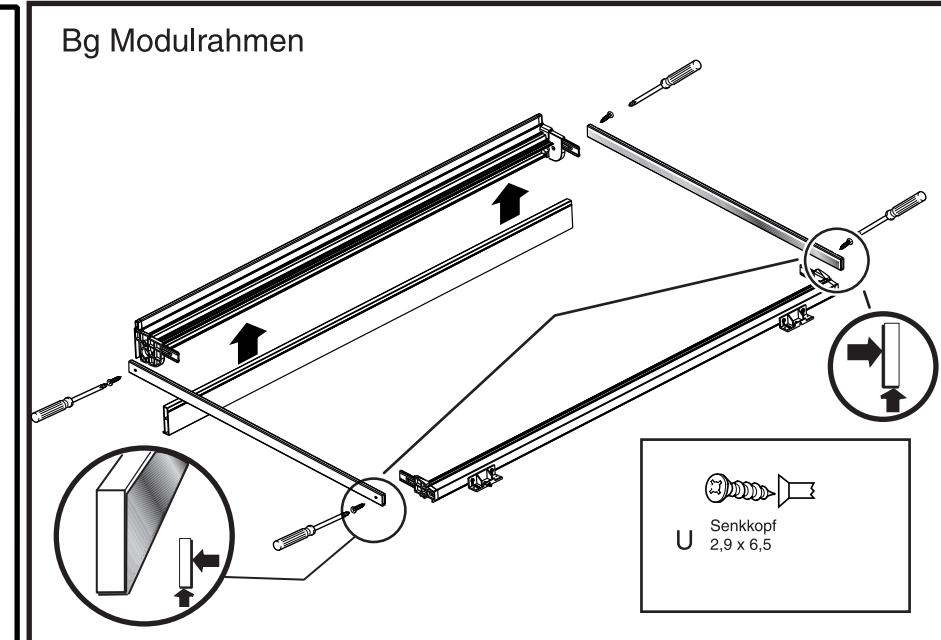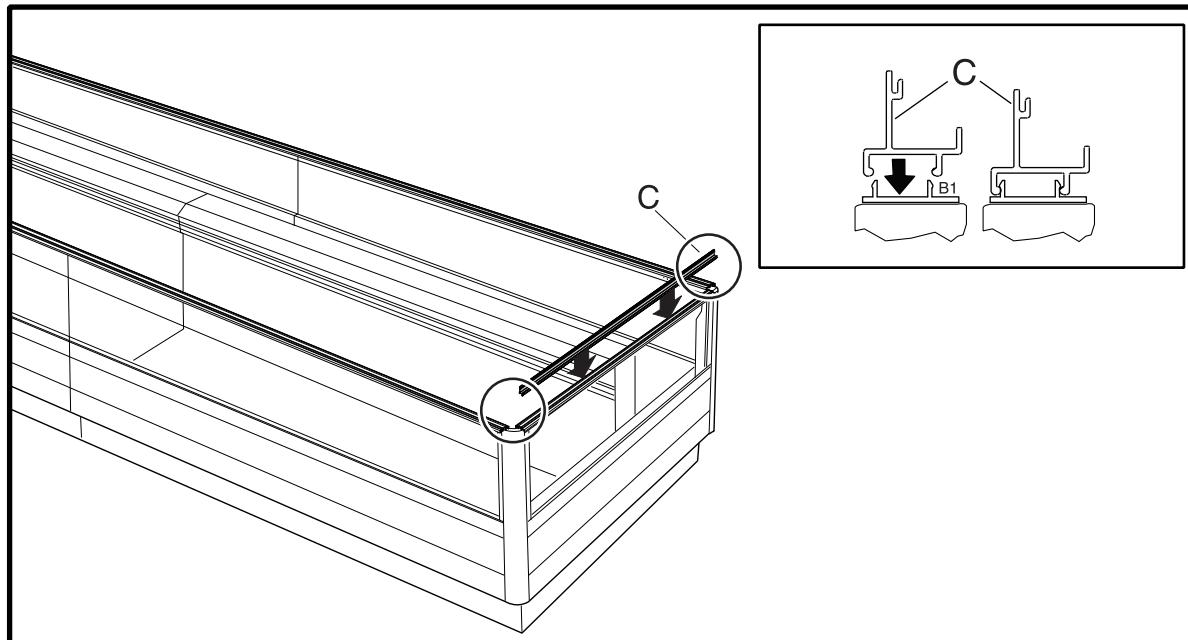


3

4


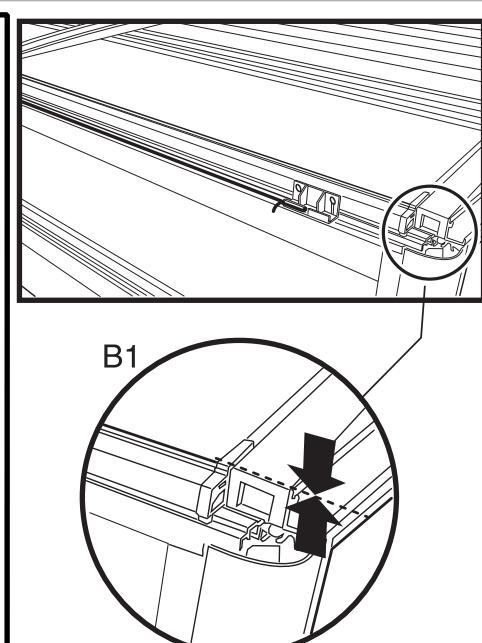
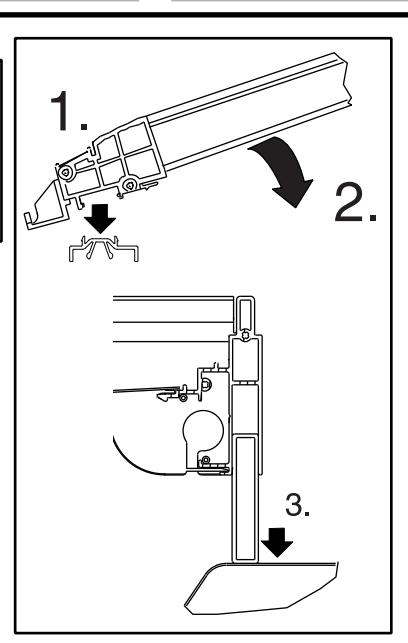
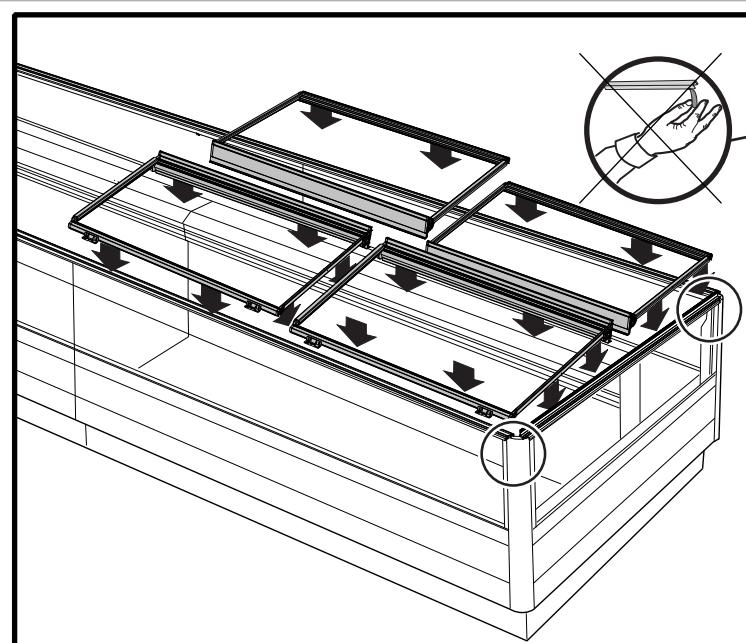


5

1
2
3
4
5
6
7
8
9
T.Nr.:10032088

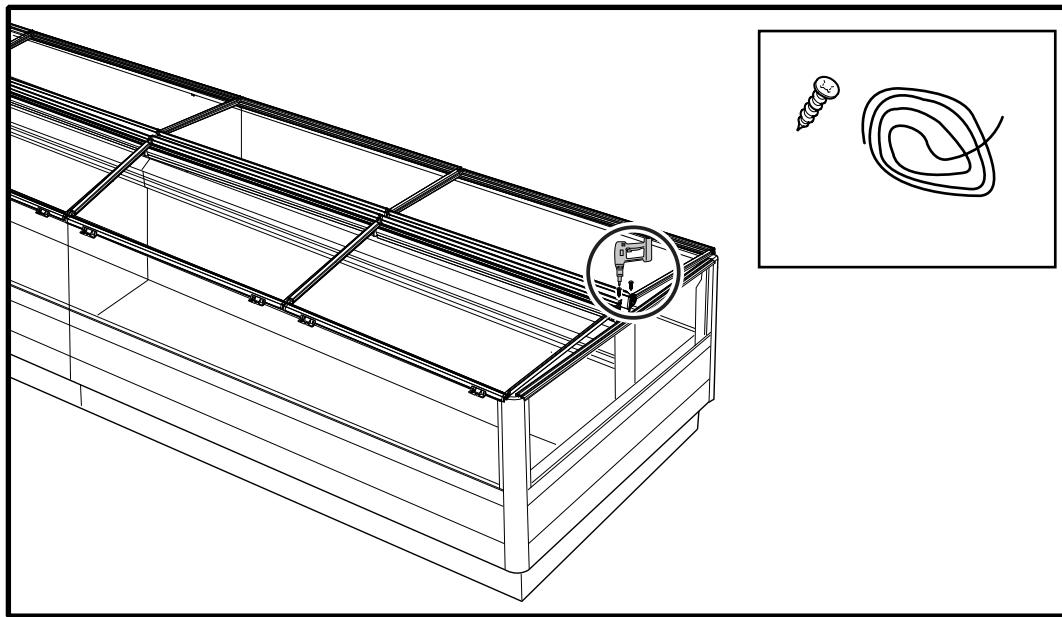


6

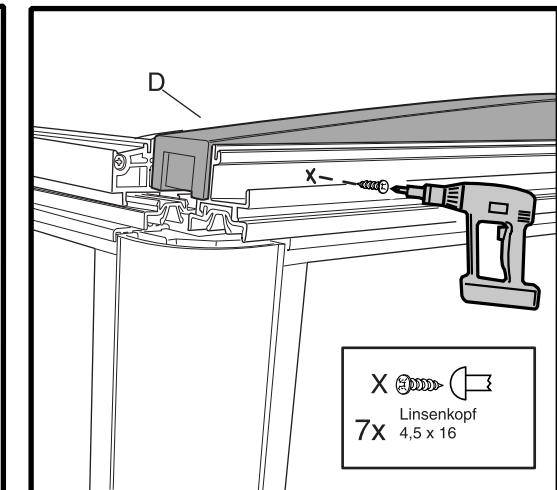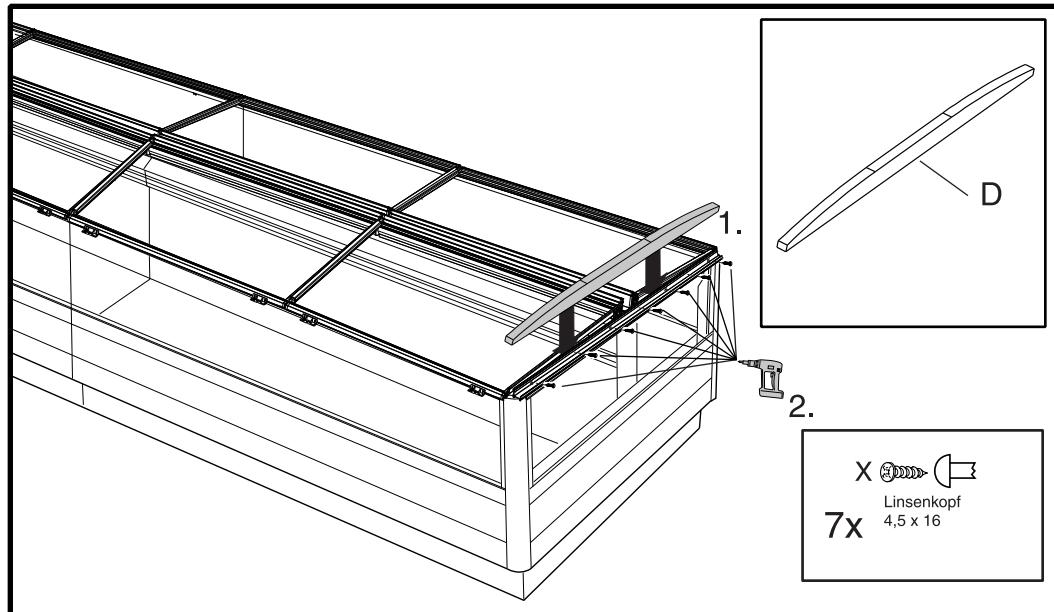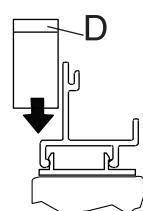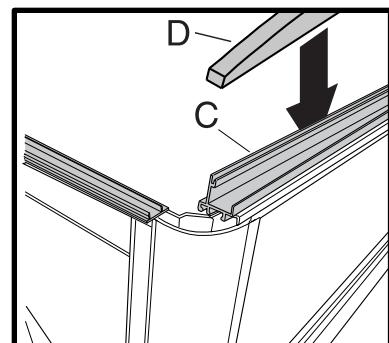


1
2
3
4
5
6
7
8
9

T.Nr.:10032088





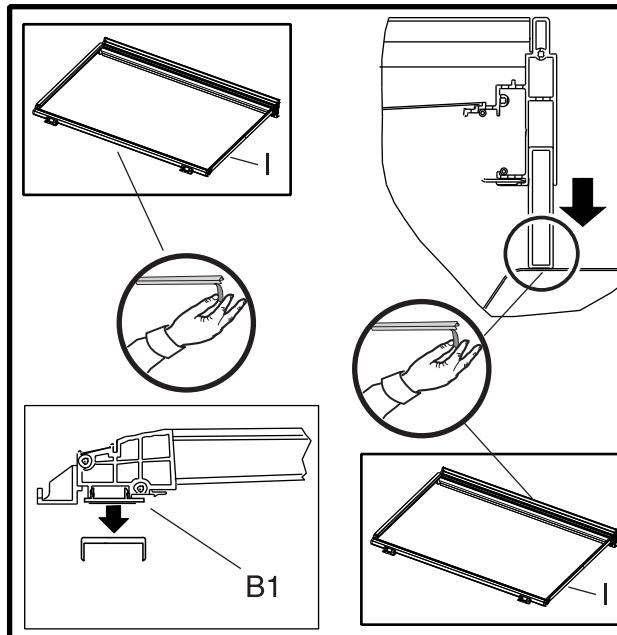


9






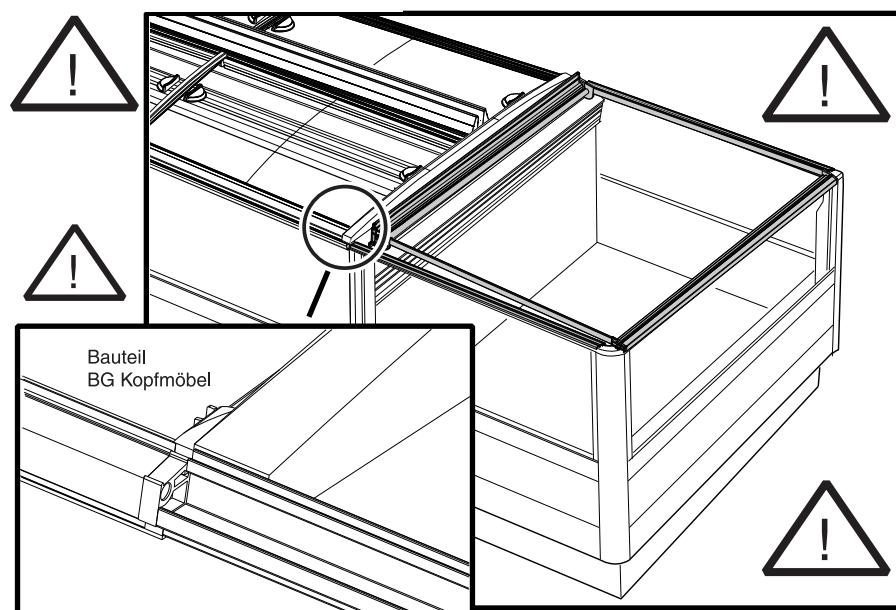


10

1
2
3
4
5
6
7
8
9
T.Nr.:10032088

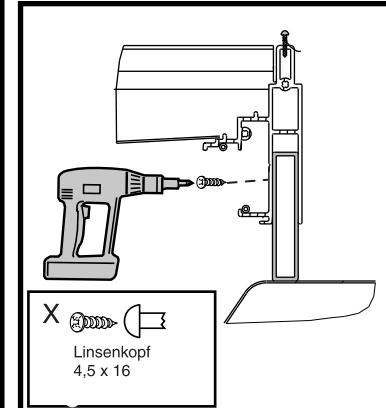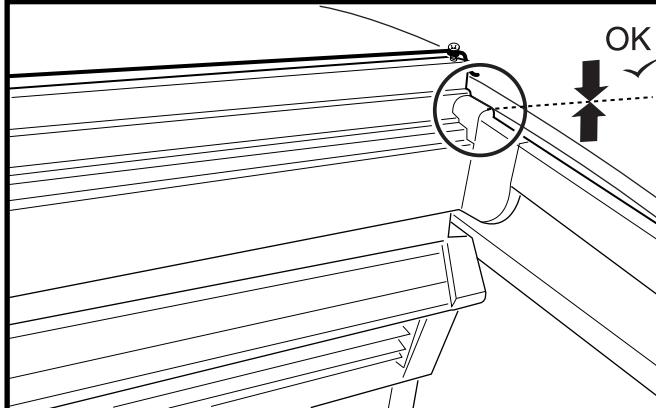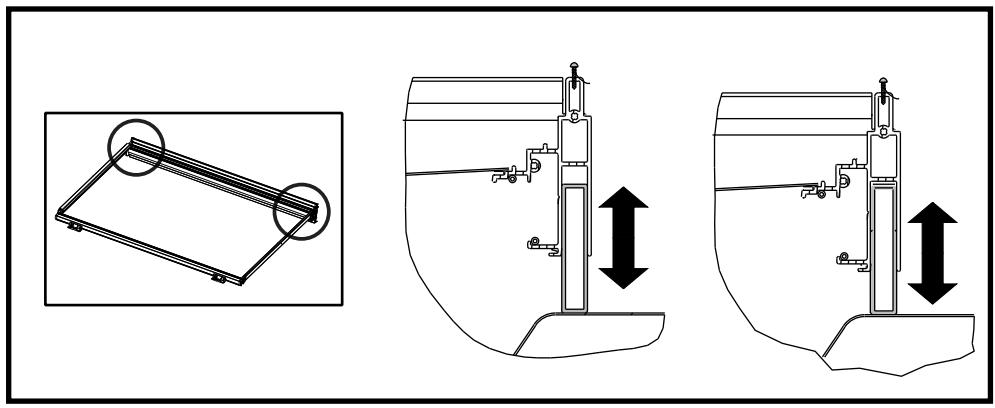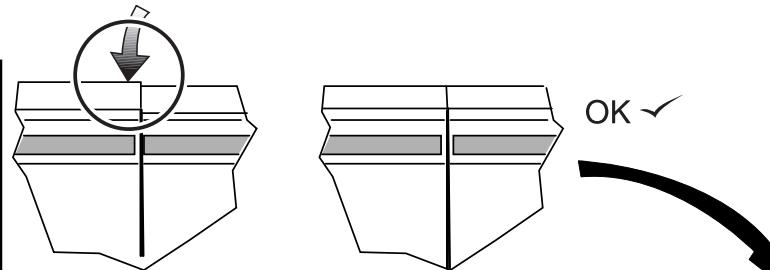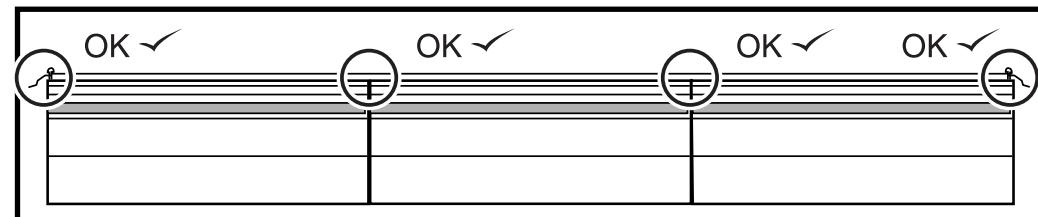

11

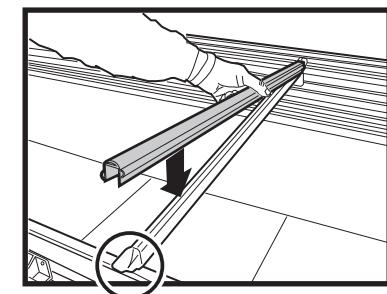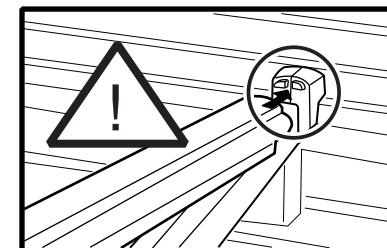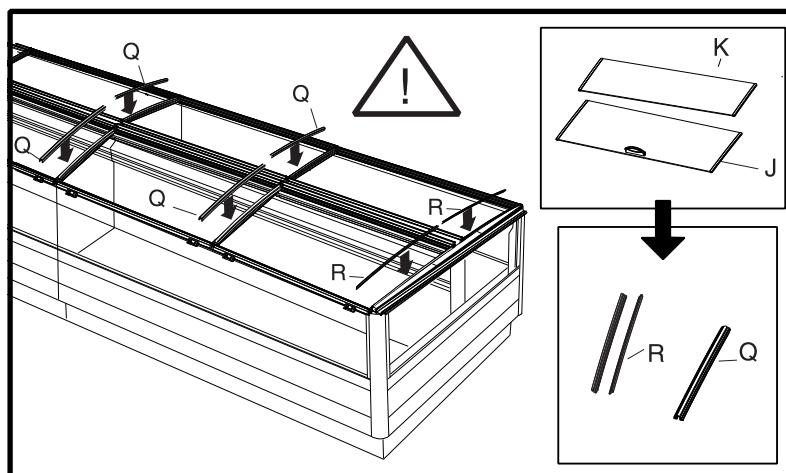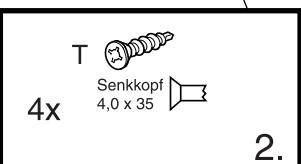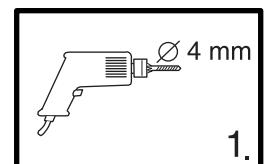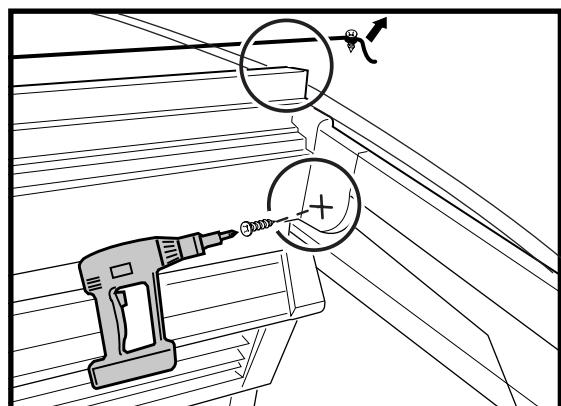


1
2
3
4
5
6
7
8
9


T.Nr.:10032088

Montageanleitung REMIglas ecoline push für Längsmöbel



 REMIS

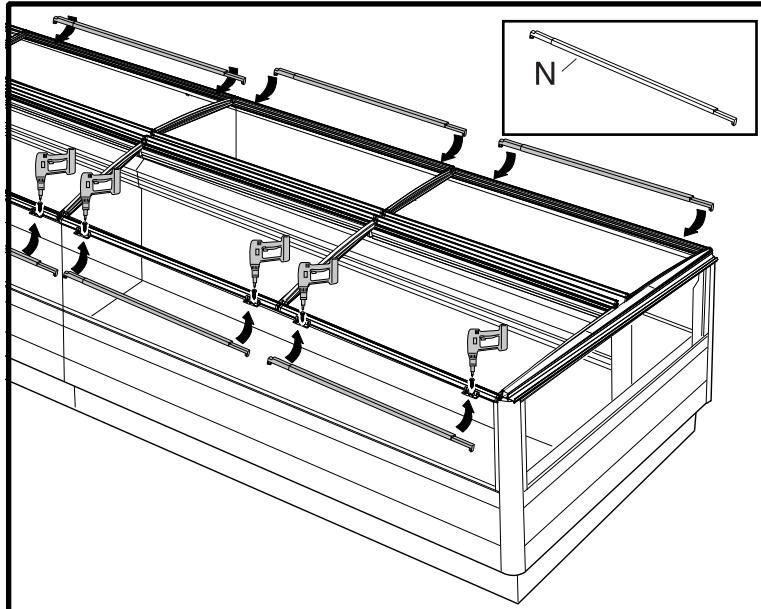


14

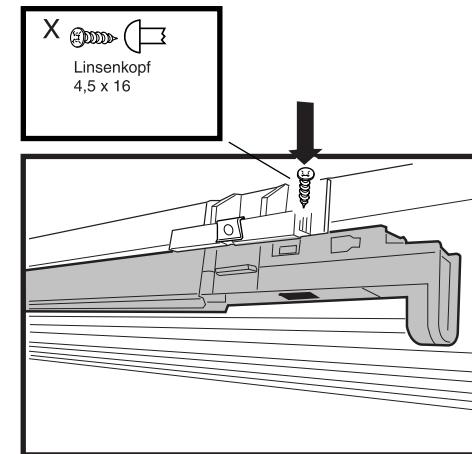




15

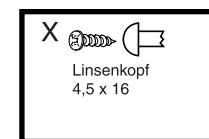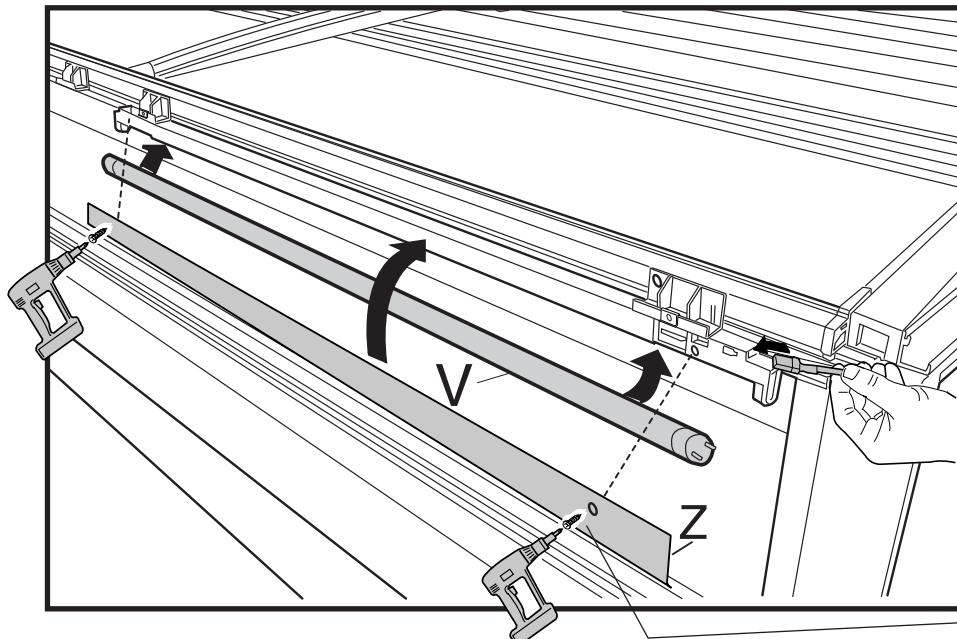




16

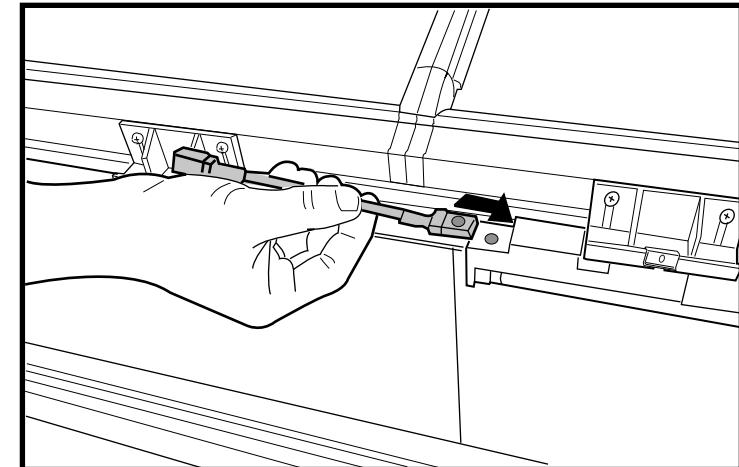

1
2
3
4
5
6
7
8
9
T.Nr.:10032088

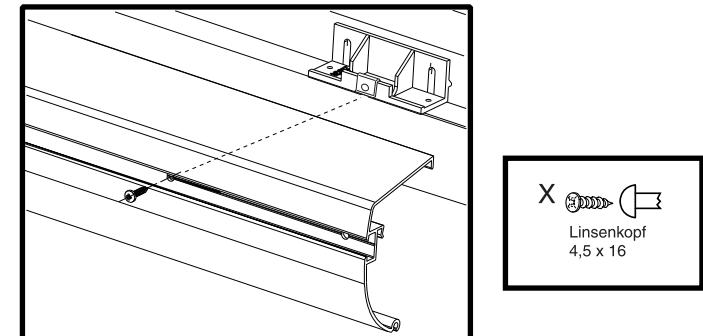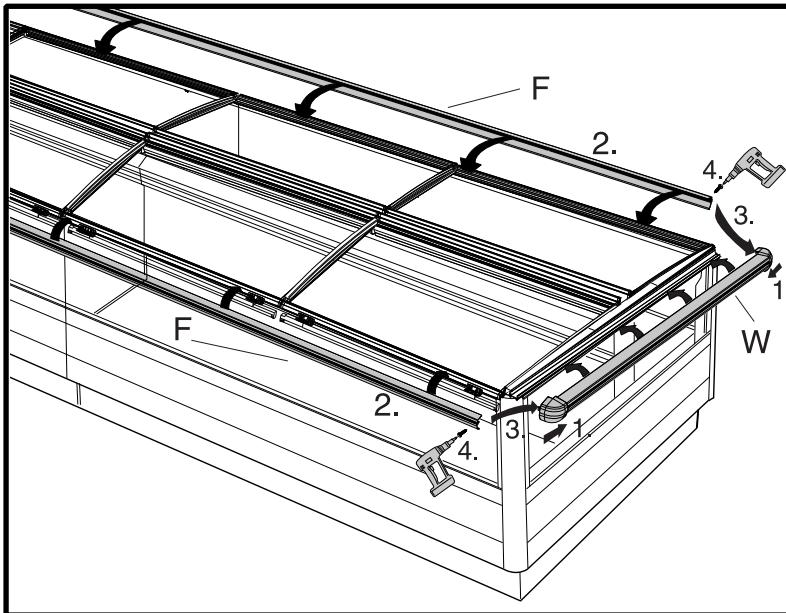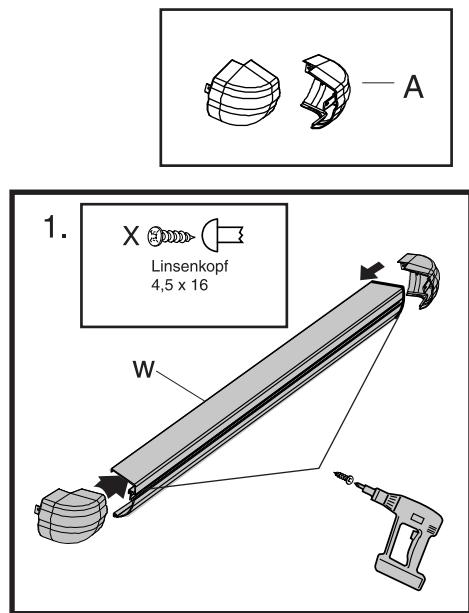



17

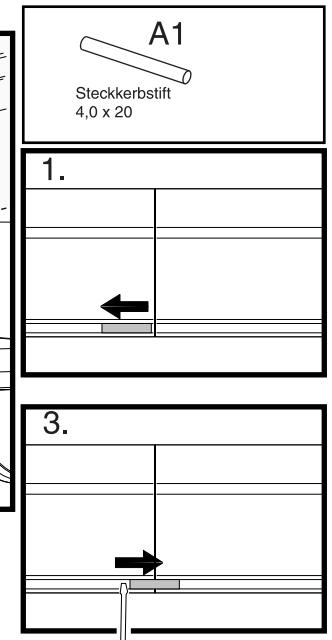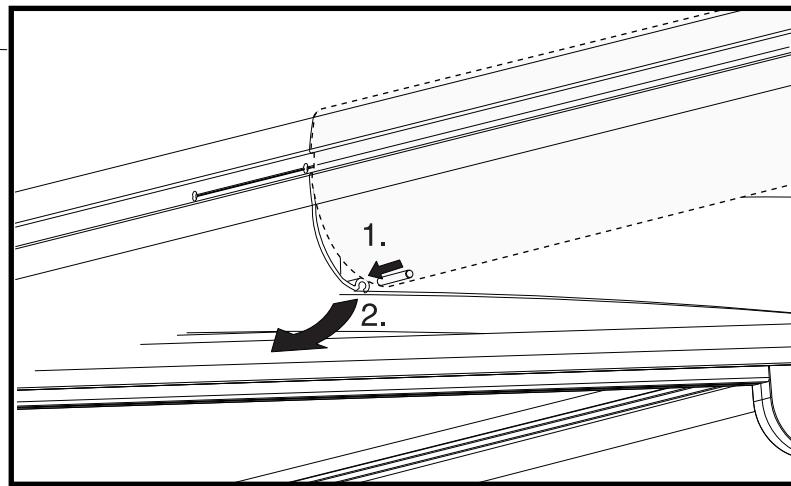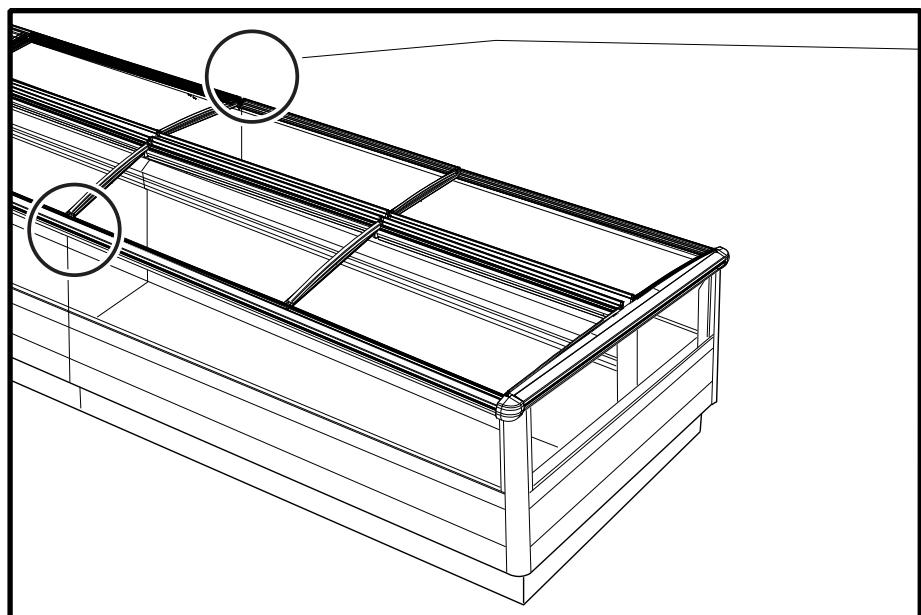



1
2
3
4
5
6
7
8
9

T.Nr.:10032088

18

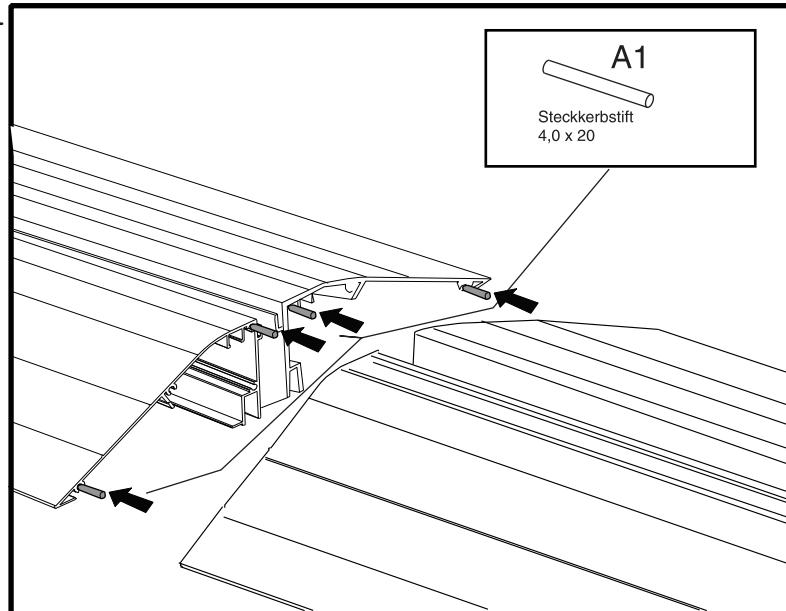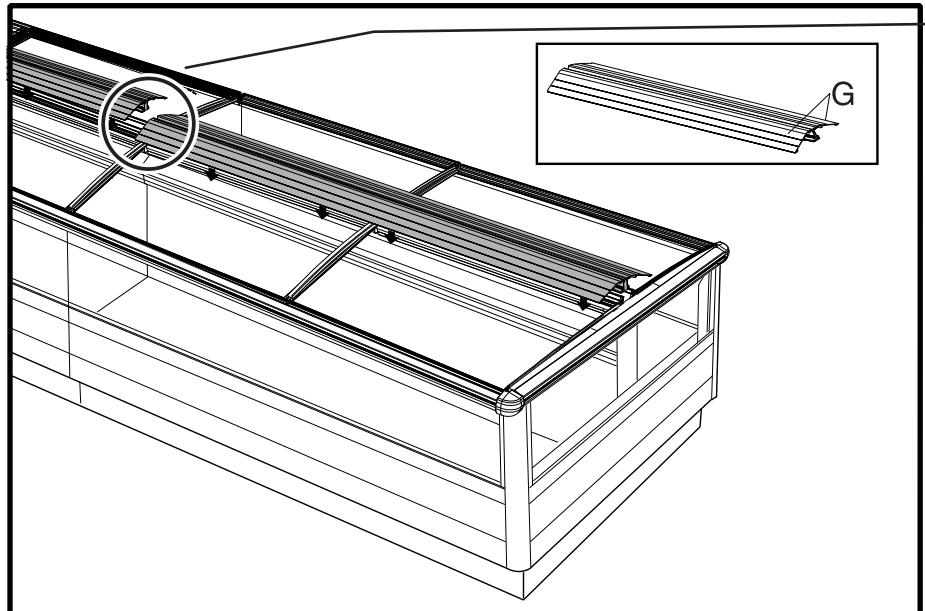


19




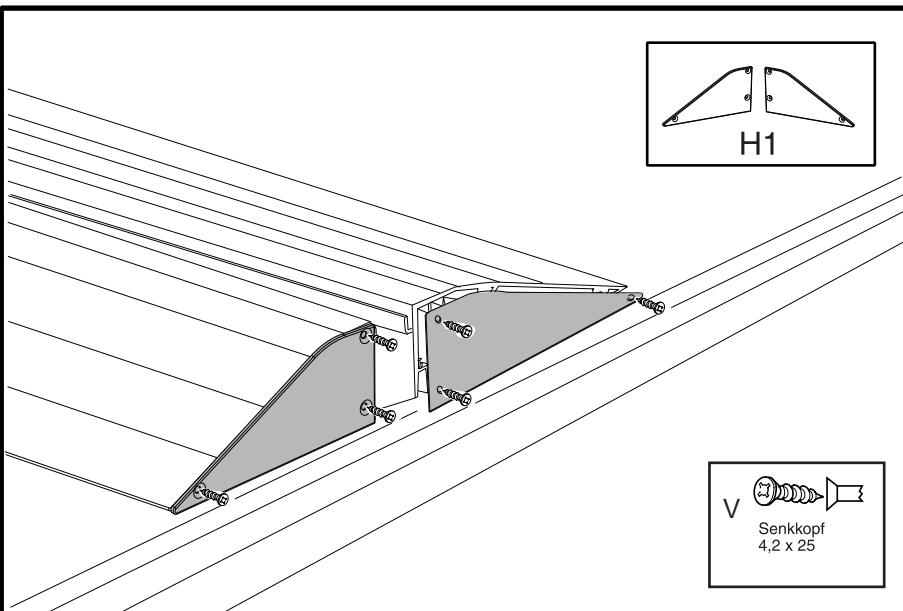
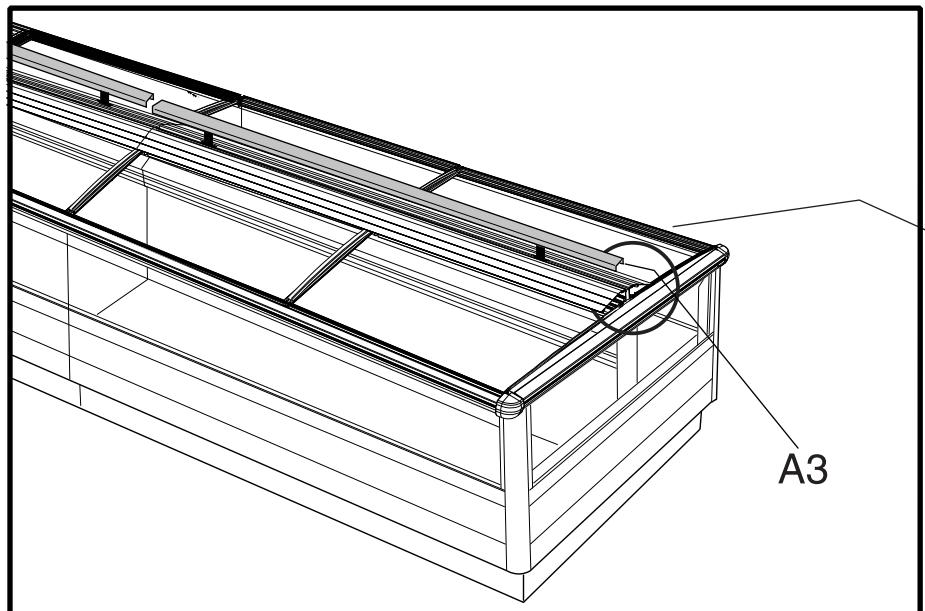


1
2
3
4
5
6
7
8
9

T.Nr.:10032088

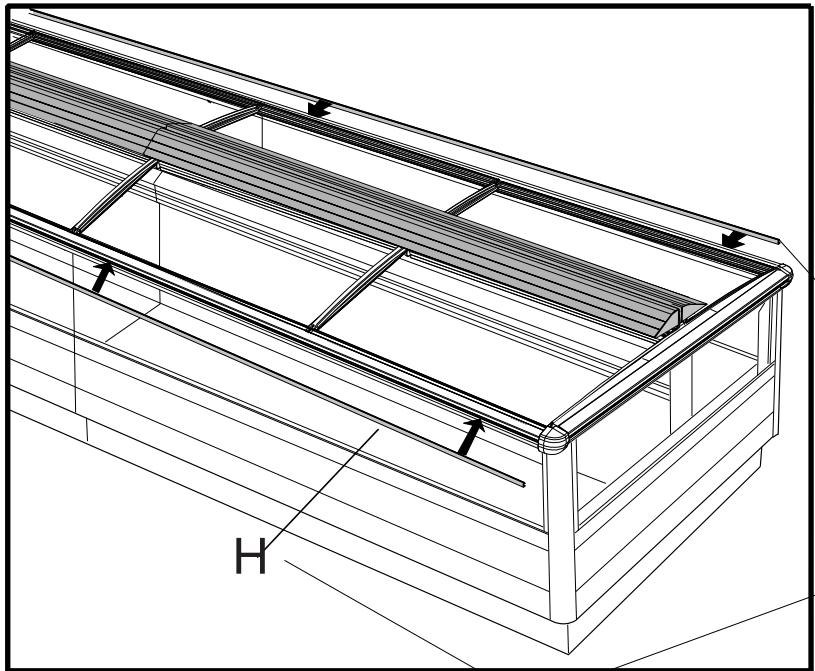

21

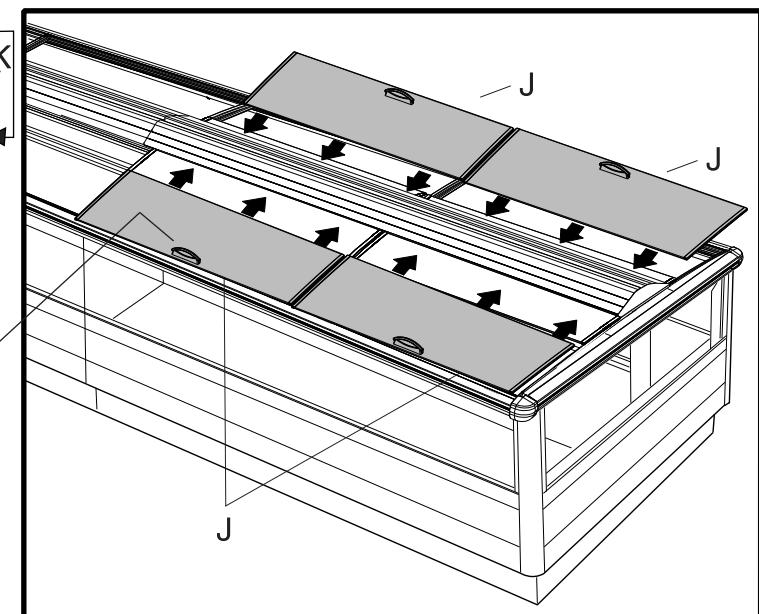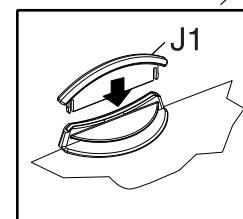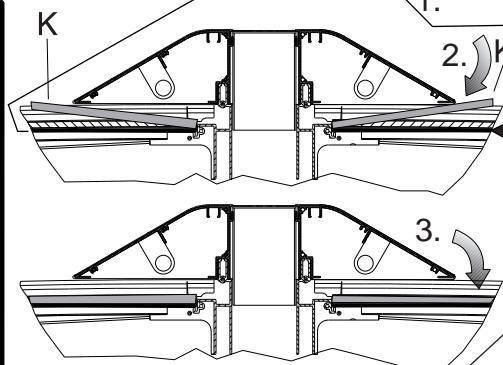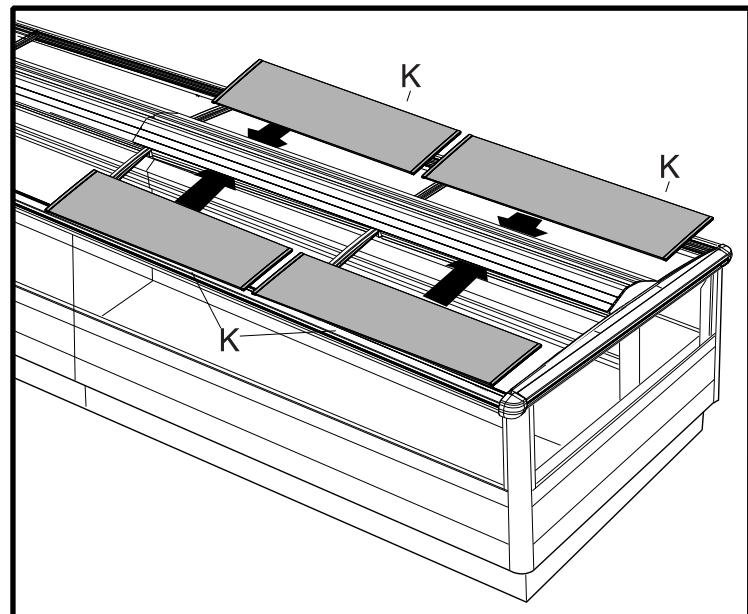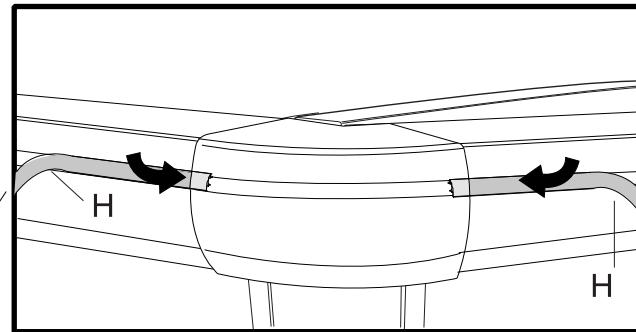

1
2
3
4
5
6
7
8
9
T.Nr.:10032088

22